


Instructions for Digital Camera Operation

1. Turn on Camera. Slide lens cover away from the flash, exposing the camera lens. This opens the lens, and turns on the power. See **“Turn on Camera”** and **“Camera front, side, and bottom”** sections.
2. Use the Image Display screen to set up your subject matter. See **“Taking pictures”** section.
3. Press shutter button to take a picture. See **“Camera top”** and **“Taking pictures”** sections.
4. After taking photos, you can view your exposures by pressing the **Live View/Playback** button on the upper right of the **Display Screen**. See **“Camera Back”** and **“Reviewing and deleting images”** sections. Pressing **Live View/Playback** button again will switch back to camera mode, allowing you to continue shooting.

Images and text taken from HP Photosmart E327 Digital Camera Quick Start Guide.


Camera back

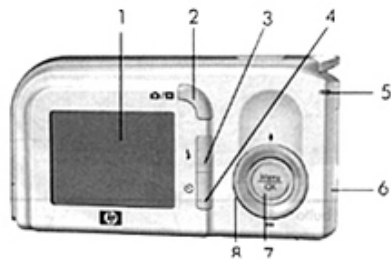

- 1 Image Display.
- 2 **Live View/Playback** button—Switches between **Live View** and **Playback**.
- 3 **Flash** button—Settings are Auto Flash, Red-Eye, Flash On, Flash Off.
- 4 Self-timer button.
- 5 Power/Memory light.
- 6 Battery/Memory card door.
- 7 **Menu** button—Displays camera menus, selects options, and confirms actions.
- 8 **Navigation** buttons—Scrolls through menus and images; while in **Live View**, press / to zoom in; press / to zoom out.

Install and format a memory card

1. Turn off the camera and open the Battery/Memory card door.
2. Insert the optional memory card in the smaller slot as shown. Make sure the memory card snaps into place.
3. Close the Battery/Memory card door and turn on the camera.

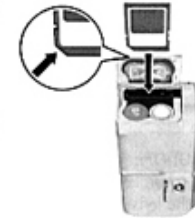


Always format memory cards before first use.

1. With the camera turned on, press , then press to move to the **Playback Menu** .
2. Press to select **Delete**, then press to display the **Delete** sub-menu.
3. Press to select **Format Card**, then press to display the **Format Card** confirmation screen.
4. Use to select **Yes**, then press to format the card.

Once you install a memory card, all new images and video clips are stored on the card, rather than in internal memory. To use internal memory and view images stored there, remove the memory card.

Camera front, side, and bottom

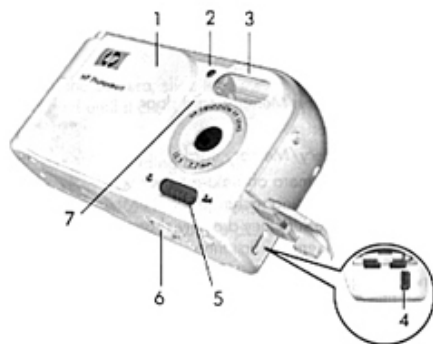

- 1 Lens cover/Power switch.
- 2 Self-timer/Video light.
- 3 Flash.
- 4 USB connector.
- 5 Focus Mode switch—Settings are Normal , or Macro .
- 6 Tripod mount.
- 7 Microphone.

Reviewing and deleting images

Review images

You can review and manipulate images in **Playback**.


1. Press until appears briefly in the upper left corner of the Image Display. This indicates you are in **Playback**.
2. Use to scroll through your images (which play automatically).

Delete an image

You can delete individual images during **Playback**.

1. Press until appears briefly in the upper left corner of the Image Display. This indicates you are in **Playback**.
2. Use to select the image you want to delete.
3. Press to display the **Playback Menu**.
4. Use to select the **Delete** option, then press .
5. Use to select **This Image**, then press to delete the image.

Camera top

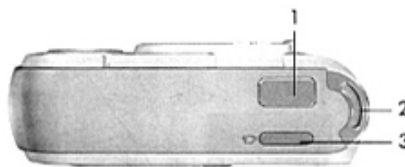

- 1 **Shutter** button.
- 2 Wrist strap mount.
- 3 **Video** button.

Turn on the camera

To turn on the camera, slide the lens cover open until it clicks, uncovering the lens.

To turn off the camera, slide the lens cover closed until it clicks, covering the lens.

CAUTION: When sliding the lens cover, keep your fingers clear of the lens. Fingerprints on the lens can impair the quality of the picture.



Install the batteries

1. Open the Battery/Memory card door.
2. Insert the batteries.
3. Close the Battery/Memory card door.

NOTE: Turn the camera off before removing the batteries. If using rechargeable NiMH batteries, make sure they are fully charged before using them the first time.

Camera usage and battery type will affect battery life. For complete information, see Appendix A in the electronic User Guide.



Live View allows you to frame pictures and video clips in the Image Display.

1. Press until appears in the upper left corner of the Image Display. This indicates you are in **Live View**.
2. Frame the subject for your picture.
3. Press the **Shutter** button to take the picture.

TIP: Hold the camera with both hands when pressing the **Shutter** button to reduce camera shake and prevent blurry pictures.

